



Triiodothyronine, Free (FT3) ELISA Kit

E22-HC9006**Catalog Number:**E22-HC9006

Purpose

This kit allows for the determination of FT3 concentrations in Human serum, cell culture supernates and other biological fluids.

Principle of the assay

The kit assay Human FT3 level in the sample, use Purified Human FT3 antibody to coat microtiter plate wells, make solid-phase antibody, then add FT3 to wells, Combined FT3 antibody which With HRP labeled, become antibody - antigen - enzyme-antibody complex, after washing Completely, Add TMB substrate solution,TMB substrate becomes blue color At HRP enzyme-catalyzed, reaction is terminated by the addition of a sulphuric acid solution and the color change is measured spectrophotometrically at a wavelength of 450 nm. The concentration of Human FT3 in the samples is then determined by comparing the O.D. of the samples to the standard curve.

Materials provided with the kit

1	Wash solution	20ml×1bottle	7	Stop solution	6ml×1bottle
2	HRP-Conjugate reagent	6ml×1bottle	8	Standar (64pmol/L)	0.5ml×1bottle
3	Microelisa stripplate	12well×8strips	9	Standard diluent	1.5ml×1bottle
4	Sample diluent	6ml×1bottle	10	Instruction	1
5	Chromogen solution A	6ml×1bottle	11	Closure plate membrane	2
6	Chromogen solution B	6ml×1bottle	12	Sealed bags	1

Material to be prepared for the experiment

- 1、Enzyme Marker
- 2、Pipettor and Gun Head
- 3、Plate washer
- 4、Test tube, centrifugal tube, measuring cylinder, etc.
- 5、Distilled or deionized water
- 6、Electrothermal thermostat

Collection of Specimen

Collection of liquid samples

1、Serum: Collected by sterile tube, blood is naturally coagulated at room temperature for 10-20 minutes, and centrifuged at 2-8 C for about 20 minutes (2000-3000 rpm). The supernatant is carefully collected. If precipitation occurs during storage, it should be centrifuged again.

2、PLASMA: EDTA, heparin sodium or sodium citrate should be selected as anticoagulant according to the requirement of the specimen. After 10-20 minutes of mixing, centrifugation at 2-8 C for about 20 minutes (2000-3000 rpm). The supernatant should be carefully collected and centrifuged again if precipitation is formed during storage.

3、Urine: Collected by sterile tube, centrifuged at 2-8 C for about 20 minutes (2000-3000 rpm). The supernatant should be carefully collected and centrifuged again if precipitation is formed during storage.

4、Pleural and ascites: collected by sterile tube, centrifuged at 2-8 C for about 20 minutes (2000-3000 rpm). The supernatant should be carefully collected. If precipitation is formed during preservation, it should be centrifuged again.

5、Cerebrospinal fluid: collected by sterile tube, centrifuged at 2-8 C for about 20 minutes (2000-3000 rpm). The supernatant was carefully collected. If precipitation formed during storage, it should be centrifuged again.

6、Saliva: collected by sterile tube, centrifuged at 2-8 C for about 20 minutes (2000-3000 rpm). The supernatant should be carefully collected. If precipitation forms during storage, it should be centrifuged again.

7、Cell culture supernatant: When detecting secretory components, it is collected by sterile tube. Centrifuge at 2-8 C for about 20 minutes (2000-3000 rpm). Carefully collect the supernatant. If precipitation forms during storage, it should be centrifuged again.

8、Milk: Collect with sterile tube, centrifuge at 2-8 C for about 20 minutes (2000-3000 rpm). Collect supernatant carefully. If precipitation forms during storage, centrifuge again.

9、Honey: collected by sterile tube, centrifuged at 2-8 C for about 20 minutes (2000-3000 rpm). The supernatant should be carefully collected. If precipitation forms during storage, it should be centrifuged again.

10、Whole blood: Collect with sterile tube containing anticoagulant, shake it gently immediately and turn it upside down several times to make the blood and anticoagulant even to prevent blood coagulation.

Collection of solid samples

1、Tissue specimens: After cutting specimens, weigh 1 g of tissue, add 9 ml of PBS at pH 7.2-7.4, and homogenize the specimens adequately by hand or homogenizer. Centrifuge for about 20 minutes (2000-3000 rpm), carefully collect the supernatant. Pack one part to be tested and the rest to be frozen for reserve. If precipitation forms during storage, centrifuge again. For plant tissues, if the homogenate is not good, they are fully ground in liquid nitrogen.

2、Samples of intracellular proteins: Many of the proteins to be tested are not secreted proteins, but proteins that exist in cells. At this time, cells should be collected, washed clean, then broken up and centrifuged for supernatant.

(1) Cultured cells

A. Animal cells: The cell suspension was diluted with PBS of PH7.2-7.4, and the cell concentration reached about 1 million/ml. Through repeated freezing and thawing (if the effect of repeated freezing and thawing is not good, the use of ultrasound to break up), so that cells destroy and release intracellular

components. Centrifuge at 2-8 °C for about 20 minutes (2000-3000 rpm). Carefully collect the supernatant. If precipitation forms during storage, it should be centrifuged again.

B. Plant cells: The cell suspension was diluted with PBS of pH 7.2-7.4, and the cell concentration reached about 1 million/ml. The cell suspension was placed on an ice box. The cell was broken for 2 seconds and cooled for 30 seconds by an ultrasonic breaker, so that the cell could be destroyed and the cell components could be released. Centrifuge at 2-8 °C for about 20 minutes (2000-3000 rpm). Carefully collect the supernatant. If precipitation forms during storage, it should be centrifuged again.

(2) Cells of tissue

After cutting specimens, 1 g of tissue was weighed and 9 ml of PBS at pH 7.2-7.4 was added. The specimens were fully homogenized by hand or homogenizer. Centrifuge at 2-8 °C for about 20 minutes (2000-3000 rpm). Remove the supernatant and wash the precipitated cells carefully with PBS at pH 7.2-7.4 for three times. Then the cells were broken by the above method.

3、Samples of intracellular proteins: Many of the proteins to be tested are not secreted proteins, but proteins that exist in cells. At this time, cells should be collected, washed clean, then broken up and centrifuged for supernatant.

4、Pharyngeal swab: Add 2 ml of PBS at pH 7.2-7.4, dissolve the head of the swab, shake it well, take out the swab with tweezers and squeeze the liquid dry, centrifuge at 2-8 °C for about 20 minutes (2000-3000 rpm). Carefully collect the supernatant. Pack one part to be tested and the rest to be frozen for reserve. If precipitation forms during storage, centrifuge again. If it is to measure secretory proteins, take the supernatant directly to detect, test intracellular proteins, to break up cells.

5、Plant specimens: Tissue blocks (0.2g-0.5g) can be rinsed in cold PBS at least 5-10mg, filter paper wiped dry, weighed accurately and put into 5 ml homogenizing tube; homogenizing medium of 9 times volume is added into homogenizing tube according to the proportion of weight (mg): volume (ml) = 1:9. Under the condition of ice-water bath, tissue blocks are cut with eye scissors as soon as possible; homogenizing method: manual homogenizing, machine homogenizing. (1) Hand-held homogenizer: the lower end of the left hand-held homogenizer tube is inserted into a vessel containing ice-water mixture, and the right hand is inserted vertically into the casing. The tamping rod is rotated up and down dozens of times (6-8 minutes) to grind thoroughly and make 20% homogenate. (2) Machine homogenate: 10% tissue homogenate is made by grinding 10 000-15 000 rpm up and down with tissue rammer. It can also be prepared by internal-cut tissue homogenizer (homogenizing time is 10 seconds/time, gap is 30 seconds, continuous 3-5 times, in ice water, it can prolong the homogenizing time properly). Microscopic observation: take a small amount of tissue homogenate for smear (direct smear, dyeing can be done), and observe under microscope. Whether the cells are broken or not, if not, the homogenization time can be prolonged. The prepared 10% homogenate was centrifuged for about 4000 rpm in a normal centrifuge or a low-temperature and low-speed centrifuge for 10-15 minutes. The supernatant was taken for determination.

Specimen requirements

1、Extract as soon as possible after Specimen collection, and according to the relevant literature, and should be experiment as soon as possible after the extraction. If it can't, specimen can be kept in -20 °C to preserve, Avoid repeated freeze-thaw cycles.

2、Can't detect the sample which contain NaN₃, because NaN₃ inhibits HRP active.

3、The above is a general sample processing method, which can not cover all kinds of samples. For some special samples, it is suggested that the experimenters refer to the published literature and design

a reasonable sample processing method by themselves.

Assay procedure

1、Dilute and add sample: Dilute Original density Standard as follow table:

32pmol/L	5 Standard	150μl Original density Standard+150μl Standard diluent
16pmol/L	4 Standard	150μl 5 Standard+150μl Standard diluent
8pmol/L	3 Standard	150μl 4 Standard+150μl Standard diluent
4pmol/L	2 Standard	150μl 3 Standard+150μl Standard diluent
1pmol/L	1 Standard	150μl 2 Standard+150μl Standard diluent

2、Add sample: Set blank wells separately (blank comparison wells don't add sample and HRP-Conjugate reagent, other each step operation is same). testing sample well. add standard 50μl in the Microelisa stripplate accurately, add Sample dilution 40μl to testing sample well, then add testing sample 10μl (sample final dilution is 5-fold), add sample to wells, don't touch the well wall as far as possible, and Gently mix.

3、Incubate: After closing plate with Closure plate membrane, incubate for 30 min at 37°C.

4、Configure liquid: 30-fold (or 20-fold) wash solution diluted 30-fold (or 20-fold) with distilled water and reserve.

5、Washing: Uncover Closure plate membrane, discard Liquid, dry by swing, add washing buffer to every well, still for 30s then drain, repeat 5 times, dry by pat.

6、Add enzyme: Add HRP-Conjugate reagent 50μl to each well, except blank well.

7、Incubate: Operation with 3.


8、Washing: Operation with 5.

9、Color: Add Chromogen Solution A 50ul and Chromogen Solution B 50ul to each well, evade the light preservation for 10 min at 37°C.

10、Stop the reaction: Add Stop Solution 50μl to each well, Stop the reaction (the blue color change to yellow color).


Assay: take blank well as zero, Read absorbance at 450nm after Adding Stop Solution and within 15min.

Steps description

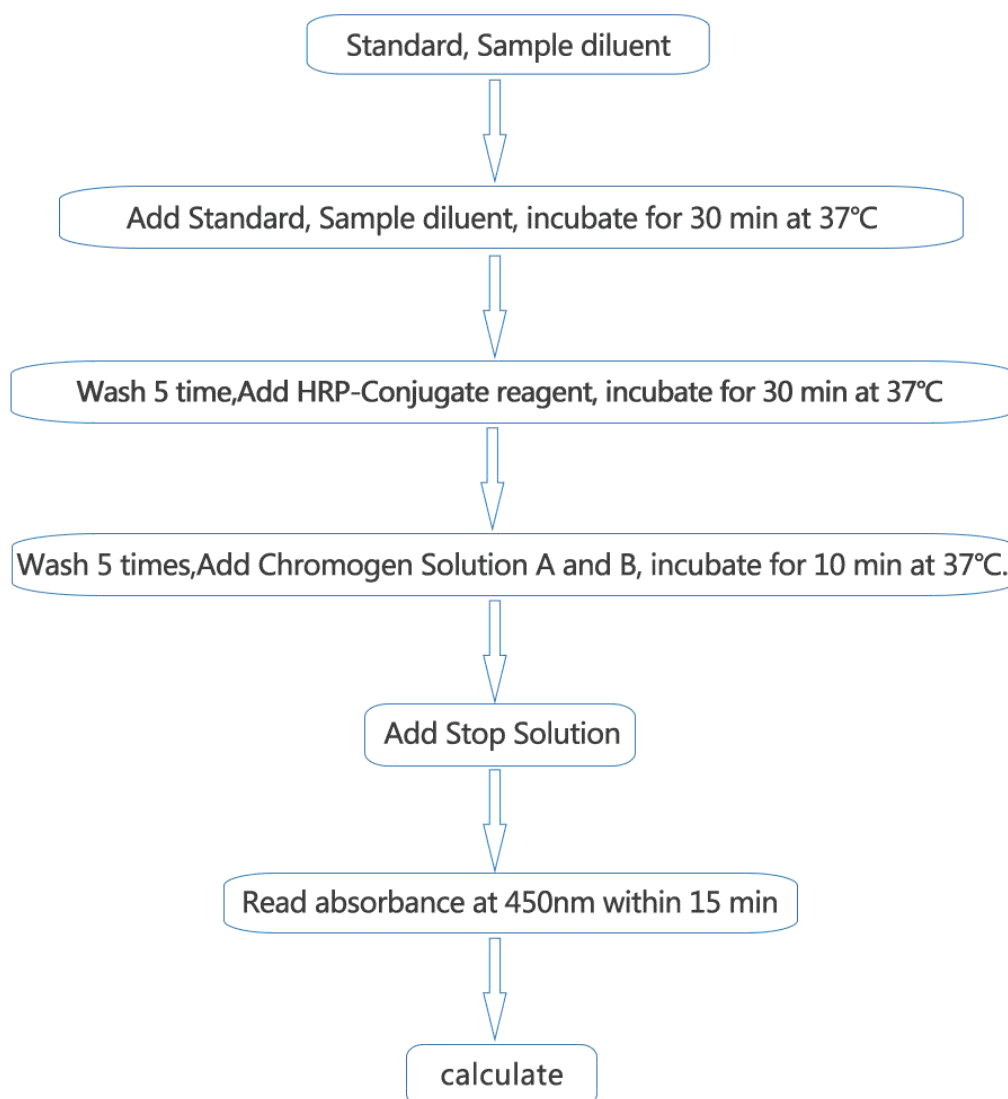

Calculate

Take the standard density as the horizontal, the OD value for the vertical, draw the standard curve on graph paper, Find out the corresponding density according to the sample OD value by the Sample curve, multiplied by the dilution multiple, or calculate the straight line regression equation of the standard curve with the standard density and the OD value, with the sample OD value in the equation, calculate the sample density, multiplied by the dilution factor, the result is the sample actual density.

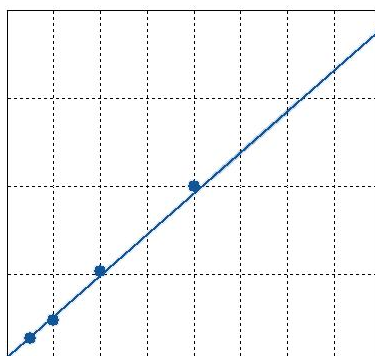

This figure is for reference only

For Research Use Only

Performance parameter

- 1、The correlation coefficient R of sample linear regression and expected concentration is above 0.95.
- 2、Coefficient of variation within and between batches should be less than 10% and 10% respectively.

Assay range

1pmol/L - 32pmol/L

Storage and validity

- 1、Storage: 2-8℃
- 2、Validity: six months

Important notes

- 1、This kit is used for scientific research, but not for clinical diagnosis.
- 2、Please use this kit within the validity period of the labeling.
- 3、Reagents in the kit should not be mixed with other batches of reagents or reagents from other sources.
- 4、The kit should be removed from the refrigerated environment after 15-30 minutes of room temperature balance. If the enzyme label is not used up after opening, the strip should be stored in a sealed bag.
- 5、The binding reaction will be affected by the dilution of any standard product, operator, liquid transfer technology, washing technology, incubation temperature, and the change of the storage time of the kit.
- 6、The kit is designed to remove or reduce some endogenous interference factors in biological samples, not all possible factors have been removed.
- 7、Concentrated detergent may crystallize. When diluted, it can be heated and dissolved in the water bath without affecting the results of washing.
- 8、Sampling adders should be used at all steps and their accuracy should be checked regularly to avoid test errors. The best time to add samples is within 5 minutes. If the number of samples is large, it is recommended to use volleyball.
- 9、Please make standard curves at the same time of each measurement. It's better to make multiple holes. If the content of the substance to be measured in the sample is too high (OD value of the sample is greater than OD value of the first hole of the standard pore), please dilute the sample diluent for a certain number of times (n times) and then determine. When calculating, please multiply the total dilution multiple (*n*5).
- 10、Sealing film can only be used once to avoid cross-contamination.
- 11、Substrates should be kept away from light.
- 12、Strictly follow the instructions. The results of the test must be determined by the reading of the enzyme label.
- 13、All samples, detergents and all kinds of waste should be treated as infectious substances.
- 14、The reagent components of different batches should not be mixed.